

# <u>Digital SWR / Watt Meter</u>

# Model: DG-103MAX Instruction manual

### INTRODUCTION

This digital SWR & Watt meter is highly accurate for measuring Forward Power

,Reflected Power, & VSWR

#### MAIN FEATURE

- 1. Large LCD (3.5") display for easy of reading.
- 2. Forward / Reflected power / VSWR ratio in one push button
- 3. Selectable to measure SSB / AM
- 4. LCD backlight display
- 5. Convenient control layout for easy operation
- 6. Packing gift box and DC 12V wire.


#### MAIN FEATURE

MODEL	DG-103MAX
Frequency Range	1.6-60 MHz
Measurement (Analog mode)	CW, FM, FDMA
Measurement (MAX mode)	SSB / AM
Calibration point	14 / 50 MHz
Power Range	1st : 300mW - 300W ; 2nd : 300W - 1200W
Accuracy	1.6-30MHz : +/- 5%
Minimum Power for SWR	300mW
Input/Output Connector	SO239
Weight (Net)	750 g
Insertion Loss	Less than 0.1 dB
Testing Function	Fwd/Ref Power & VSWR ratio
Input/Output Impedance	50 Ohm
Dimension (W/H/D) mm	140 x 84 x 122
Accessories	Operation Manual, 12V DC Wire

#### <FRONT PANEL>



# <REAR PANEL>

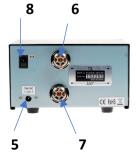

# <FRONT & REAR PANEL>

- 1. LCD Display : Indicates FWD/REF and VSWR
- 2. Power range switch
  - Low : 300mW-300W ; High : 300W-1200W
- 3. DC Power switch
- 4. MAX mode operating : (when switch to 'MAX' )
- 3 measuring SSB / AM
  - NOTE : When measuring TDMA or other digital modes the display may blink due to the nature of the transmission this is not a fault of the design and is normal operation

#### <REAR PANEL>

- 5. Power source :12V DC wire
  - [Black is negative (-), black/white is positive (+)]
- 6. TX : Coax connector to transmitter
- 7. ANT : Coax connector to antenna
- MAX switch : Selectable SSB / AM (MAX mode : When switch pushed upward)